

21.5*20cm

Control Remoto Universal

Manual de Instrucciones

¡IMPORTANTE!

Por favor, lee completamente y con atención este instructivo, antes de realizar cualquier acción con el equipo, para saber cómo utilizar adecuadamente el producto.


La información presentada sirve únicamente como referencia sobre el producto. Debido a actualizaciones pueden existir diferencias. Consulta nuestra página web www.qfxusa.com para obtener la versión más reciente de este manual.

PRECAUCIONES

- Los niños deben supervisarse para asegurarse de que no empleen el aparato como juguete.
- No uses ni almacenes el equipo en lugares donde existan goteras, salpicaduras, acumulación de polvo o donde esté expuesto a líquidos.
- Limpialo con un paño suave.
- Mantén el producto lejos de fuentes de calor directo.
- Evita que el producto sufra golpes o caídas.
- No intentes abrir o reparar el producto.

Las funciones de algunos botones pueden cambiar o incluso no estar disponibles, dependiendo de la marca de la televisión o pantalla con la que se pretenda usar el control universal.

DESCRIPCIÓN

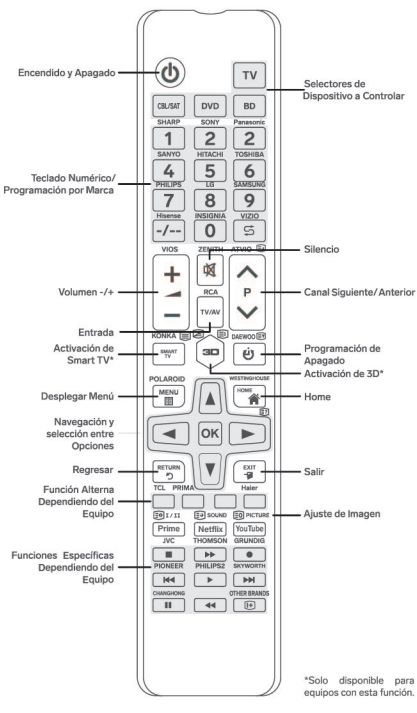

CÓMO COLOCAR LAS BATERÍAS

Retira la tapa posterior e instala 2 pilas AAA. Corroborar la polaridad marcada al fondo del compartimento.

ESPECIFICACIONES

Alimentación: 3 V==== (2 x AAA)
Dimensiones: 23 x 4,7 x 2,3 cm

Las especificaciones pueden cambiar sin previo aviso.

MODOS DE PROGRAMACIÓN

Por Marca

1 Presiona el botón TV + el botón que corresponde a la marca de tu TV. Revisa la tabla de marcas. Ejemplo: TV + 2, para televisión Sony

2 Comprueba que los botones básicos funcionen correctamente. En caso de no funcionar, repite el paso 1.

Por Búsqueda automática

Con el televisor encendido y el control apuntando hacia él:

1 Presiona el botón TV para acceder al modo de programación de TV

2 Presione y mantenga presionado el botón de encendido hasta que el botón de TV comience a parpadear.

3 Mantenga direccionado el control remoto hacia la TV a programar. El control está en modo auto búsqueda.

4 Sea paciente este proceso podría tomar un par de minutos, mantenga el control remoto direccionado a la TV y su dedo sobre el botón OK para presionar este botón.

5 Cuando la TV se apague inmediatamente presione el botón OK para que el código de su TV se quede grabado en el control remoto. (Este paso es muy importante para el adecuado funcionamiento del control remoto)

6 Pruebe los botones del control remoto para ver si funcionan correctamente (encendido, apagado, etc.)

7 Si no funcionan los botones del control remoto favor de repetir nuevamente el proceso de auto búsqueda. (En ocasiones se debe repetir este proceso mas de una vez.)

PROGRAMACIÓN DE OTROS EQUIPOS

El control puede ser usado para controlar equipos CBL, SAT, DVD y BD. Para configurar estos equipos, sigue el método de programación por marca, sustituyendo el botón TV por el botón del tipo de equipo a controlar (CBL/SAT, DVD o BD).

TABLA DE MARCAS

BOTÓN	MARCA	BOYÓN	MARCA
1	SHARP	▶▶	THOMSON
2	SONY	◀◀	PIONEER
3	PANASONIC	▶▶	SKYWORTH
4	SANYO	Ⓢ	VIZIO
5	HITACHI	VOL+	VIOS
6	TOSHIBA	CH+	ATWIO
7	PHILIPS	TV/AV	RCA
8	LG	■	JVC
9	SAMSUNG	●	GRUNDIG
- / --	HISENSE		CHANGHONG
0	INSIGNIA	▶	PHILIPS2
Botón rojo	TCL	SMART TV	KONKA
Botón azul	HAIER	HOME	WESTINGHOUSE
Botón verde	PRIMA	MENU	POLAROID
⏻	DAEWOO	⏻	OTRAS MARCAS

FUNCIÓN DE BOTONES

No.	BOTÓN	MARCA	FUNCIÓN
1	POWER		Encendido On / Off
2	TV / CBL / SAT / BD / DVD		Selección el dispositivo a ser operado CBL / SAT / BD / DVD
3	1	SHARP	TV / CBL / SAT / BD / DVD
4	2	SONY	TV / CBL / SAT / BD / DVD
5	3	PANASONIC	TV / CBL / SAT / BD / DVD
6	4	SANYO	TV / CBL / SAT / BD / DVD
7	5	HITACHI	TV / CBL / SAT / BD / DVD
8	6	TOSHIBA	TV / CBL / SAT / BD / DVD
9	7	PHILIPS	TV / CBL / SAT / BD / DVD
10	8	LG	TV / CBL / SAT / BD / DVD
11	9	SAMSUNG	TV / CBL / SAT / BD / DVD
12	- / --	HISENSE	TV / CBL / SAT / BD / DVD
13	0	INSIGNIA	TV / CBL / SAT / BD / DVD
14	Ⓢ	VIZIO	Para operar JUMP, FLASH-BACK o CHANNEL RETURN dependiendo de la marca de la TV
15	⏻		Silencio
16	CH+	ATWIO	Avanzar canal
17	CH-		Retrosceder canal
18	VOL+	VIOS	Aumentar volumen
19	VOL-		Disminuir volumen
20	TV/AV	RCA	Fuente / Código otra marca
21	SMART TV	KONKA	Menú SMART TV (navegación)
22	3D		Menú 3D
23	⏻	DAEWOO	Programación apagado
24	MENU	POLAROID	Menú de pantalla - utilizar con los botones de navegación ARRIBA, ABAJO, IZQUIERDA, DERECHA / marca de TV
25	HOME	WESTINGHOUSE	
26	⏻		Botones de navegación ARRIBA, ABAJO, IZQUIERDA, DERECHA.
27	OK		Seleccionar elementos del menú del dispositivo a controlar
28	↶		Regresar
29	↷		Salir del Menú
30	Botón rojo	TCL	Marca de TV
31	Botón verde	PRIMA	Marca de TV
32	Botón amarillo		
33	Botón azul	HAIER	Marca de TV
34	APRM		Botón de acceso inmediato a Prime
35	NFLX		Botón de acceso inmediato a Netflix
36	PLAY YT		Botón de acceso inmediato a YouTube
37	■	JVC	Detener
38	▶▶	THOMSON	Avanzar capítulo
39	●	GRUNDIG	
40	◀◀	PIONEER	Atrasar
41	▶	PHILIPS2	Reproducir
42	▶▶	SKYWORTH	Avanzar / Juegos
43		CHANGHONG	Pausa
44	◀◀		Atrasar capítulo
45	⏻	OTRAS MARCAS	Para programar otras marcas de TVs



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058



support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2020 ©



www.qfxusa.com